



# INCIZO ALUMINIUM SUB- PROFILE FOR STAIRS

Technical data sheet  
English

# INCIZO ALUMINIUM SUBPROFILE FOR STAIRS

Vinyl

## GENERAL INFORMATION

The Incizo profile allows you to finish your stairs and steps in the flooring design of your choice. For this application, you need the Incizo profile and an aluminium subprofile (NEVINCPBASE1).



### CONTENTS

### COMPOSITION

### COLOUR

Subprofile for stairs

Non anodised aluminium  
(6060 T66)

Silver tone

### ORDER CODE

### DIMENSIONS

NEVINCPBASE

2000 x 33 x 17 mm

### Applicable for:

All rigid Vinyl floors (except for floors that are  $\leq 4$  mm).

# INCIZO ALUMINIUM SUBPROFILE FOR STAIRS

Vinyl

## FEATURES



# INCIZO ALUMINIUM SUBPROFILE FOR STAIRS

Vinyl

## PREPARATION


Read and follow the safety instructions included with power tools used. Safety glasses should be worn at all times. Only for use in residential applications.

1. Double-check you have ordered the correct aluminium subprofile for the floor of your choice (NEVINCPBASE1).
2. Clear the stairs of debris, making sure that all stairs are clean and level.
3. Use screws of 2,5mm diameter. Drill diameter should be 3mm.

# INCIZO ALUMINIUM SUBPROFILE FOR STAIRS

Vinyl

## INSTALLATION

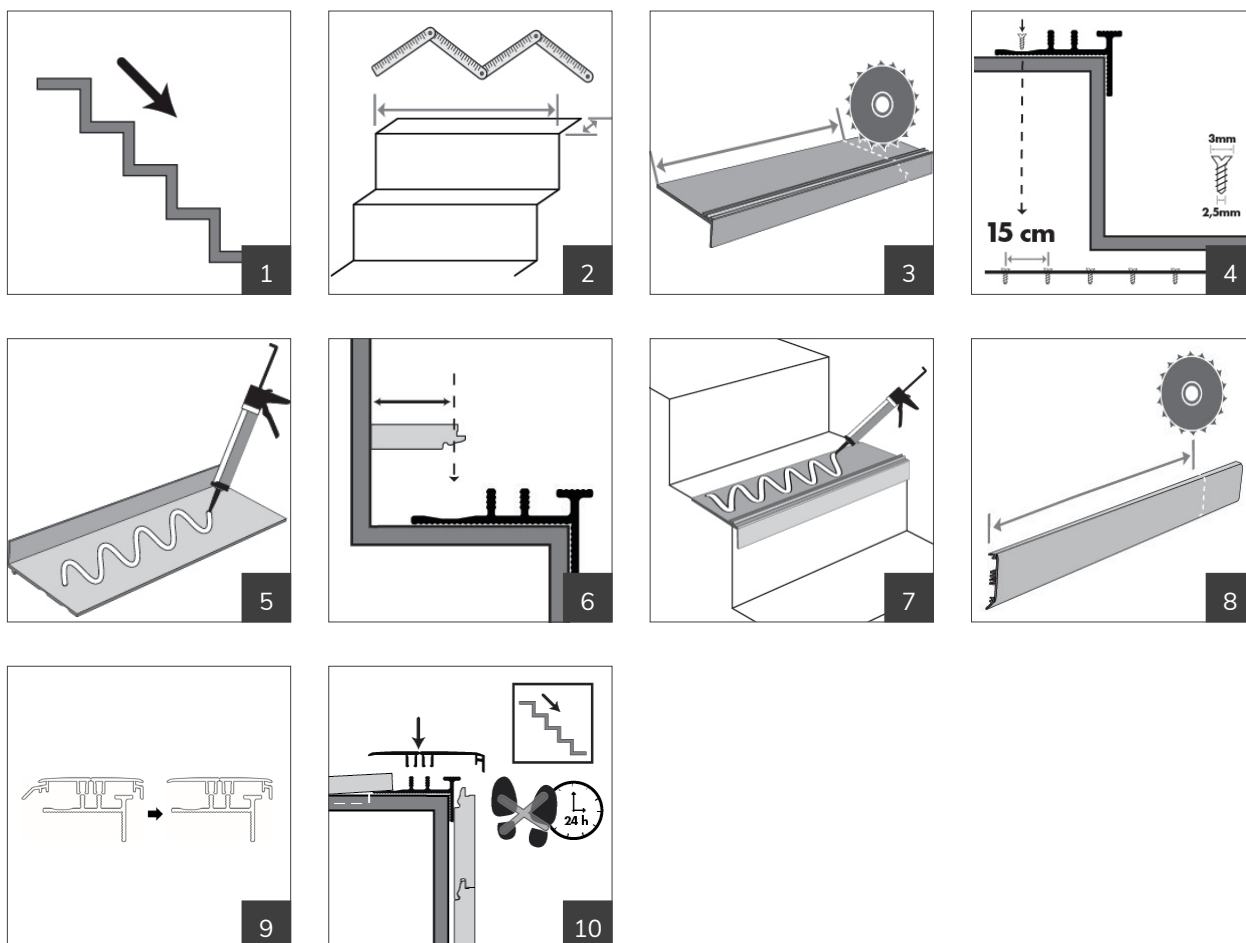

1. Start at the top of the stairs and work downwards.
2. Measure the tread.
3. Saw the aluminium subprofile to the right length.
4. If desired, you can screw the stair profile on the thread. Drill holes in the subprofile with a drill diameter of 3 mm and with an interval of 15 cm
5. Apply glue to the bottom of the subprofile. Depending on the subfloor of the stairs, use a suitable glue. Repeat these steps for every step before moving on to step 6.

# INCIZO ALUMINIUM SUBPROFILE FOR STAIRS

Vinyl

6. Measure the length and width of the vertical surface and horizontal surface of the stair steps. Cut the vertical and horizontal vinyl planks to the right size. If needed, click 2 planks together to obtain more width. Make sure that the tongue and groove are cut off on all 4 edges.
7. Start with the vertical planks and work your way from the top of the stairs to the bottom. Use a MS polymer glue for PVC. Apply the cut vinyl plank to the glued surface. Go on to the next stairstep. After applying all vertical planks, you can apply the horizontal planks, again from the top of the stairs to the bottom of the stairs. Let dry (respect drying time).
8. Begin at the top of the stairs and work your way downwards. Saw the Incizo® profile to the right length. Do the sawing slowly to avoid cracks in the PVC. Keeping it in its protective incizo base, also helps to saw it more easily.
9. Cut off the reducer part of the Incizo® with the Incizo® knife – see vinyl incizo instructions.
10. Apply glue to the two protrusions of the subprofile, where the incizo profile will click into. Click the Incizo® profile downwards from left to right into the two protrusions. Repeat installation for the rest of the stairs. After installation, do not walk on the stairs for at least 24 hours (respect drying time).

Unilin bv division flooring  
Ooigemstraat 3, B-8710 Wielsbeke  
T: +32 56 67 52 11  
unilin.com

